LANRJ45C6P Local Area Network (LAN) Protector

1. General



2. Introduction

The LANRJ45C6P has been designed to provide protection to Local Area Networks (LAN) from overvoltage surges and electrostatic discharges created by switching transients in buildings. LAN systems are particularly prone to such disturbances because long cable lenghts often behave like antennas to such atmosphereic distrubances. The product is designed to fulfill all versions of POE applications compatable with IEEE 802.0f and IEEE 802.3at.

Technical Data	LANRJ45C6P		
Nominal operating voltage	48 VDC		
Max. operating voltage	50 VDC		
Nominal operating current at 25°C	1 A		
Frequency	0 - 250 MHz		
Operating temperature	- 40 C + 80 C		
Degree of protection	IP 20		
Housing material	Metal		


	LANRJ45C6	LANRJ45P0	LANRJ45C6	DEPRS232	RTP3034
Application	IAN	A	Ā	JEG.	RTP
Ethernet 10/100 - Cat 5e	×	×	×		
Ethernet 100/1000 - Cat 5e/6			×		
Power over Ethernet Mode A		×	×		
Power over Ethernet Mode B		×	×		
12V/ RS232				×	
2-wire 4-20mA loops					×

3. Quick Installation Overview

- 1. Mount the LANRJ45C6P onto grounded DIN rail
- Connect the incoming data line into either port of the LANRJ45C6P
- Connect the outgoing data line into the remaining open port of the LANRJ45C6P

4. Mounting

LANRJ45C6P is designed to clip onto 35mm (top hat) DIN rail (standard EN50022) set in the horizontal position with the securing clips towards the bottom of the rail and the label text facing the correct way up.

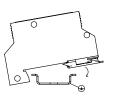

5. Optional Mounting Bracket

The LANRJ45C6P can be used with an optional mounting bracket for flat-surface mounting. The additional mounting bracket comes with a grounding kit to be used with the product.



Product

WARNING:

- 1. Pentair products shall be installed and used only as indicated in Pentair product instruction sheets and training materials. Instruction sheets are available at www.erico.pentair.com and from your Pentair customer service representative.
- 2. Pentair products must never be used for a purpose other than the purpose for which they were designed or in a manner that exceeds specified load ratings.
- 3. All instructions must be completely followed to ensure proper and safe installation and performance.
- 4. Improper installation, misuse, misapplication or other failure to completely follow Pentair's instructions and warnings may cause product malfunction, property damage, serious bodily injury and/or death, and void your warranty.

SAFETY INSTRUCTIONS:

All governing codes and regulations and those required by the job site must be observed.

Always use appropriate safety equipment such as eye protection, hard hat, and gloves as appropriate to the application.


IEEE is a registered trademark of The Institute of Electrical and Electronics Engineers, Inc

Pentair, CADDY, ERICO CADWELD, ERICO CRITEC, ERICO, ERIFLEX, and LENTON are owned by Pentair or its global affiliates. All other trademarks are the property of their respective owners. Pentair reserves the right to change specifications without prior notice.





LANRJ45C6P Local Area Network (LAN) Protector

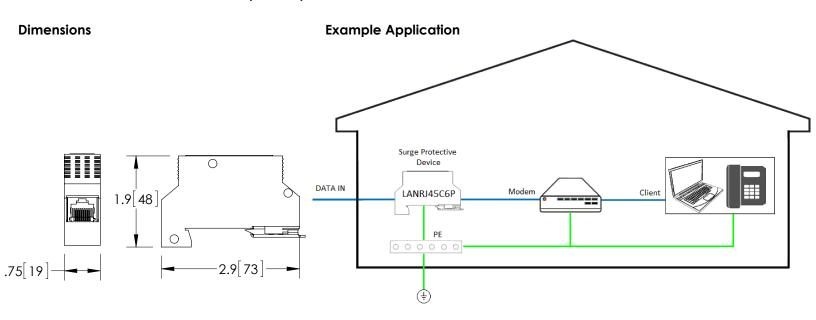

Pentair, CADDY, ERICO CADWELD, ERICO CRITEC, ERICO, ERIFLEX, and LENTON are owned by Pentair or its global affiliates. All other trademarks are the property of their respective owners. Pentair reserves the right to change specifications without prior notice.

2 of 2



